


Montageanleitung - Mounting Instructions

Instruction de montage - Instrucciones del montaje - installatie richtlijnen

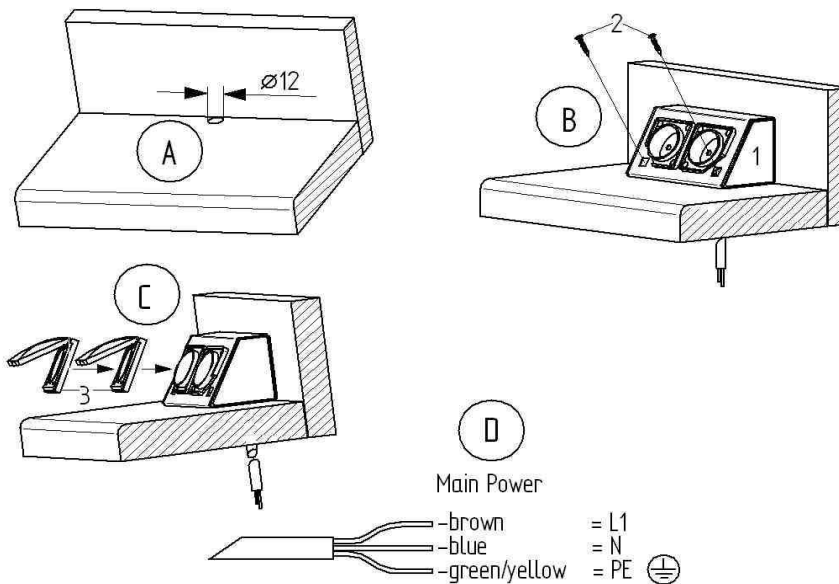

Montagefolge:

Abbildung zeigt 2-fach Version
Picture shows 2-fold Version

A: Kabeldurchfuehrung mind. 12 mm bohren

B: Leitung durch die Kabelfuehrung (A) schieben und Steckdosenelement (1) positionieren
Mittels beigefügten Befestigungsschrauben (2) anschrauben

C: Klappdeckel (3) aufklippsen

D: Netzanschluss vornehmen

Anschlußwert: 250 V/16 A max. 3500 Watt

Achtung: Alle Montagearbeiten in spannungslosen Zustand durchführen

Bitte beachten Sie die jeweils gültigen VDE Richtlinien.

Änderungen an den Elementen oder deren Bauteile sind nicht gestattet

Mounting Steps:

A: Drilling hole for main cable minimum 12 mm

B: Main cable put through the drilling hole (A) and place the socket Element (1) in the right position
Mount the socket Element (1) with the screws (2) 3,5 x 16 mm on the worktop

C: Socket Cover (3) clip on the socket frame

D: Make the connection with the main power

max. 250 V/16 A 3500 Watt

Attention: The applicable VDE rules must be observed, see DIN VDE 0100

Make sure the power supply is disconnected before carrying out any mounting work

Changes to the socket element or any cords and connections are not permitted