

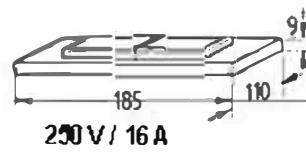




Montageanleitung - Installation Instruction

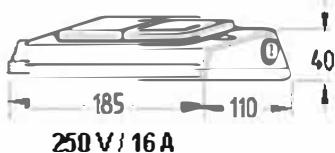


LED:
9000 Kelvin
1,44 Watt
62 Lumen
80 RA

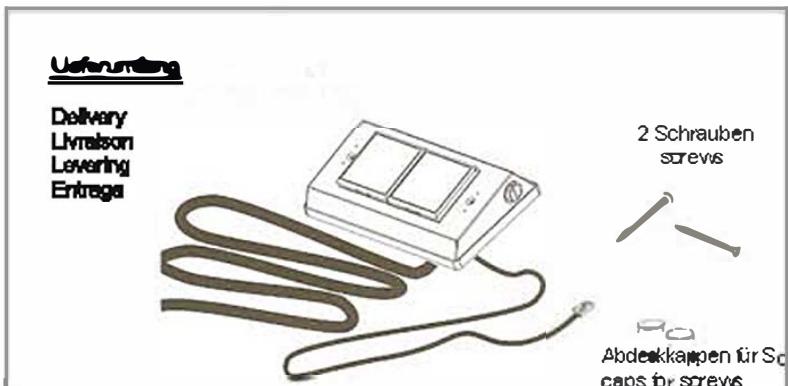

Einbaumaße / Installation dimensions

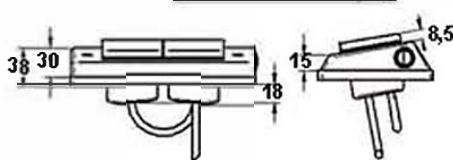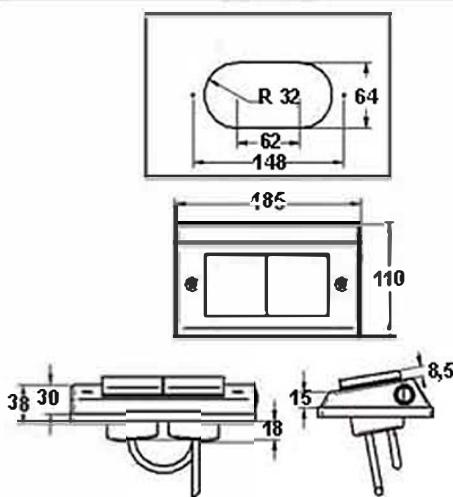

Schritt 1: Bohrungen anhand der Maßzeichnung vornehmen
Step 1 Holes make light of the drawing
- Trous de faire la lumière sur le dessin
- Gaten maken licht van de tekening
- Los agujeros para hacer la base del dibujo

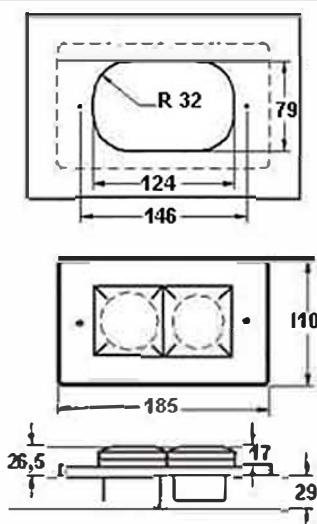

Schritt 2: Löcher für die Schrauben bohren


Step 2
- Drill holes for the screws
- Percez des trous pour les vis
- Boor de gaten voor de schroeven
- Taladre los agujeros para tornillos



Schritt 3: Steckdose laut Abbildung festschrauben

Step 3
- Screwsocket based illustration
- illustration Douille à vis base
- Schroef socket gebaseerde illustratie
- Tornillo de toma de base la ilustración

Stromanschluß - LED
power supply - LED

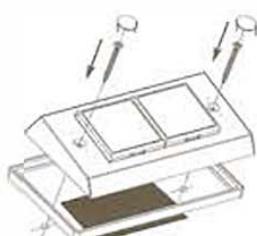

Schritt 4: >>>>
Step 4

* Netzanschluß Steckdosen
250 V / AC

L1 = braun / brown
N = blau / blue
PE = grünblau / green-yellow

